

# How to build a Kids Don't Float Loaner Board

## - Samples -

### Free Standing Board



Easy as 1 - 2 - 3

1. Attach poster to plywood board
2. Add dowels to the bottom for hanging PFDs
3. Securely nail board against wall



### Stand Board




#### **Materials needed for a stand-alone board:**


- 2 - 4" x 4" x 10" (all 2x4 and 4x4 lumber is pressure treated)
- 3 - 4" x 4" x 47" (totaling 3 - 4" x 4" x 8')
- 1 - 2" x 4" x 47"
- 2 - 2" x 4" x 44"
- 2 - 2" x 4" x 37" (angle cut for roof, see drawing)
- 4 - 2" x 4" x 15" (angle cut for roof, see drawing) (totaling 3 - 2" x 4" x 8')
- 1 - 25" x 48" x 3/4" (plywood for Kids Don't Float sign)
- (all plywood sheets can be cut from one 4x8x3/4 sheet)
- 2 - 24" x 48" x 3/4" (plywood for roofing)
- 4 - 10" x 1" (dowels for hanging life vests)
- (additional dowels can be offset in backside)
- 12 - 3/8" x 6" lag bolts
- 1/2# - wood screws for fastening roof trusses
- 1/2# - wood screws for fastening roofing sheets

**\*\*See next pages for actual building plans**

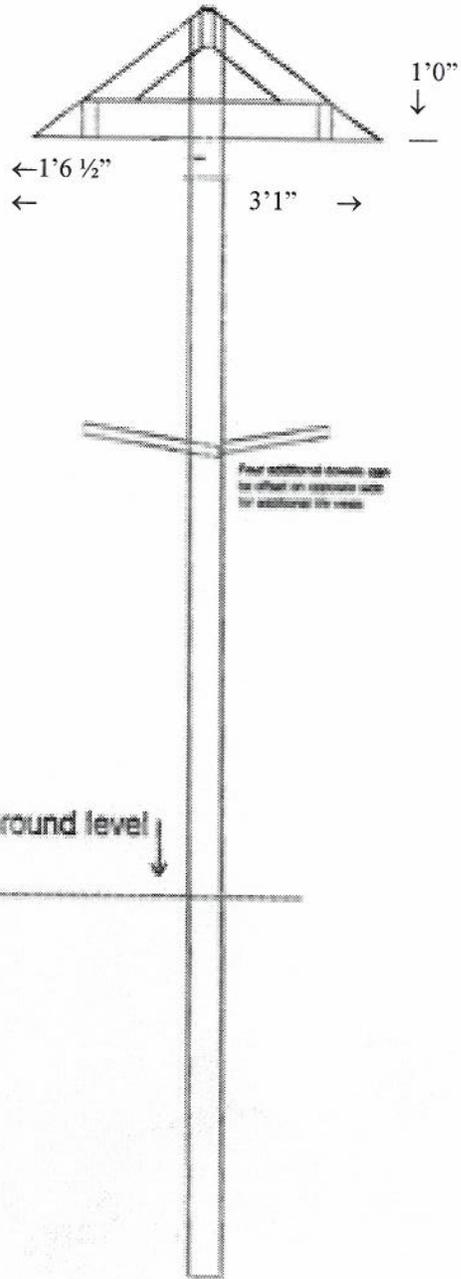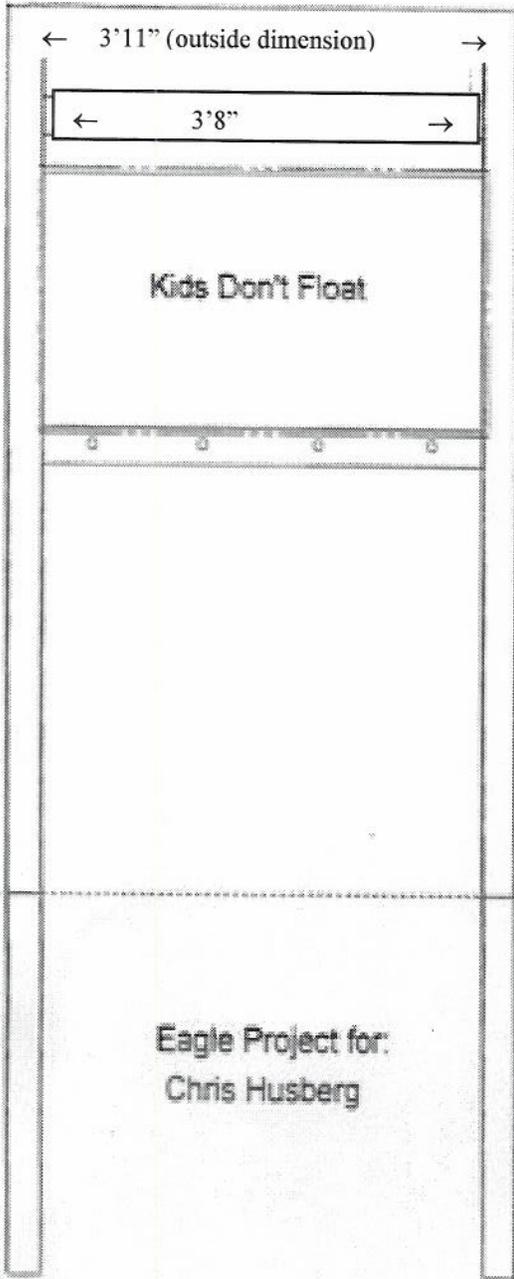

← 4'-6" →  
← 3'-11" →

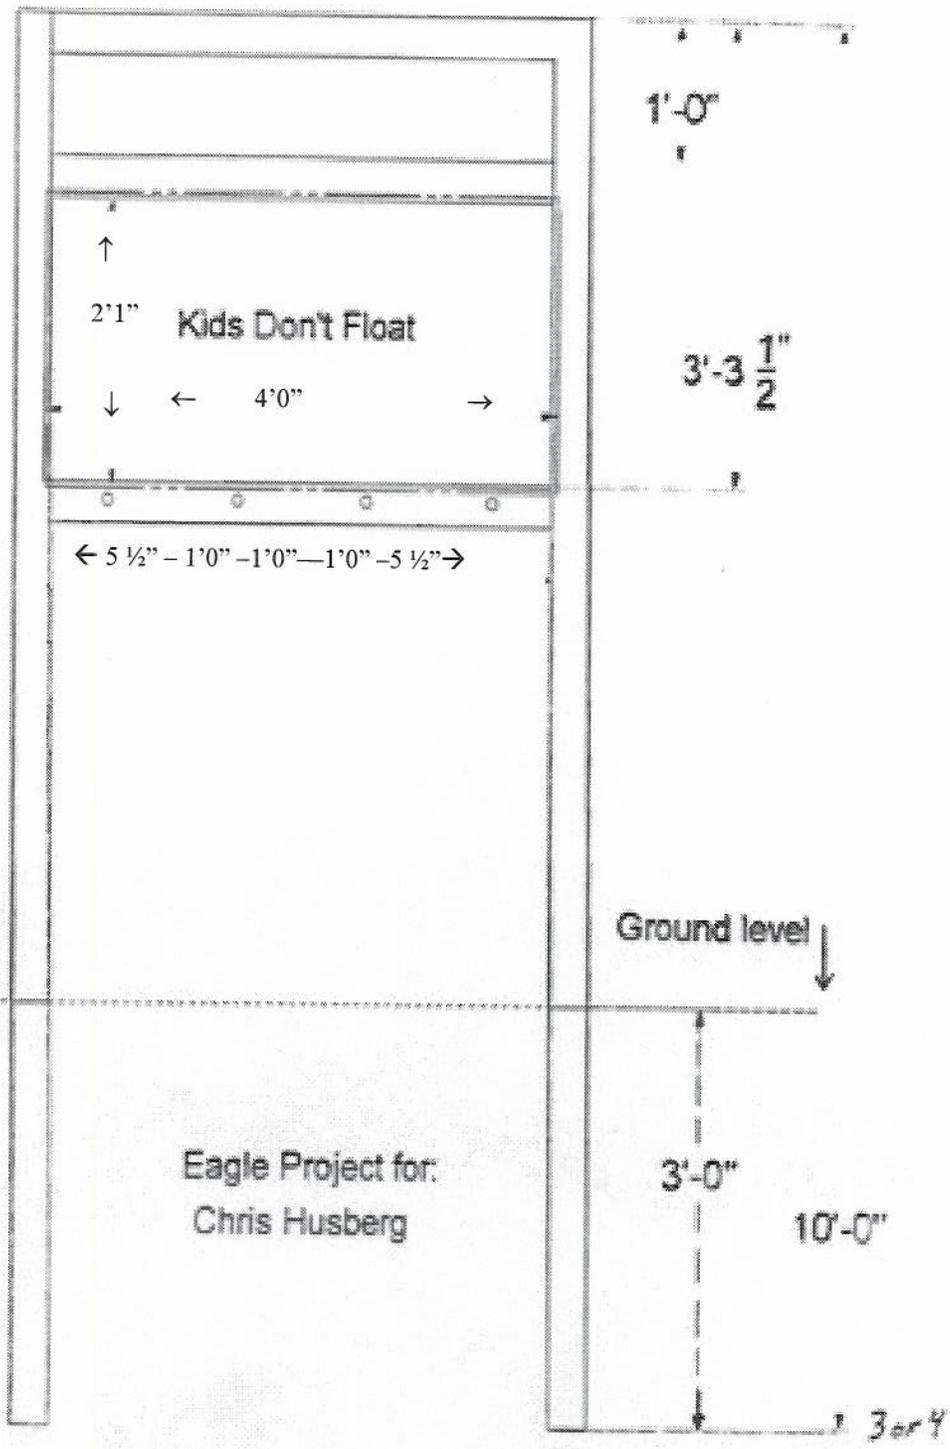

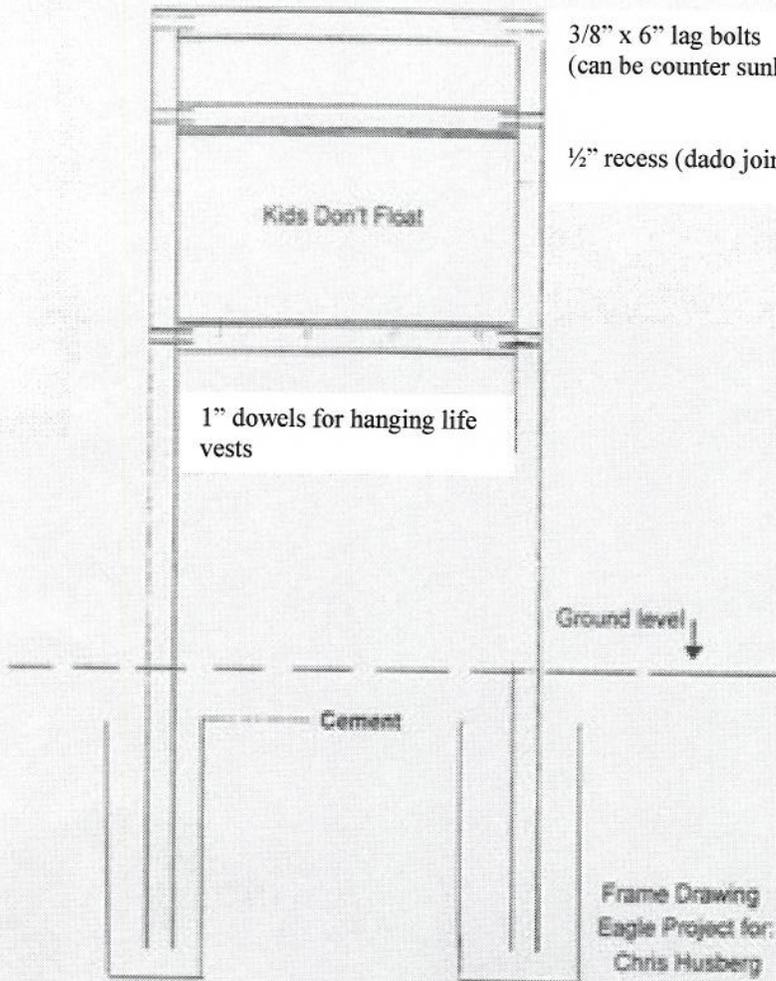

3/8" x 6" lag bolts  
(can be counter sunk 1/2")

1/2" recess (dado joint)

Kids Don't Float

1" dowels for hanging life vests



Ground level ↓

Cement

Frame Drawing  
Eagle Project for  
Chris Husberg

# Kids Don't Float Loaner Board


## Wooden Boxes (Style "C")

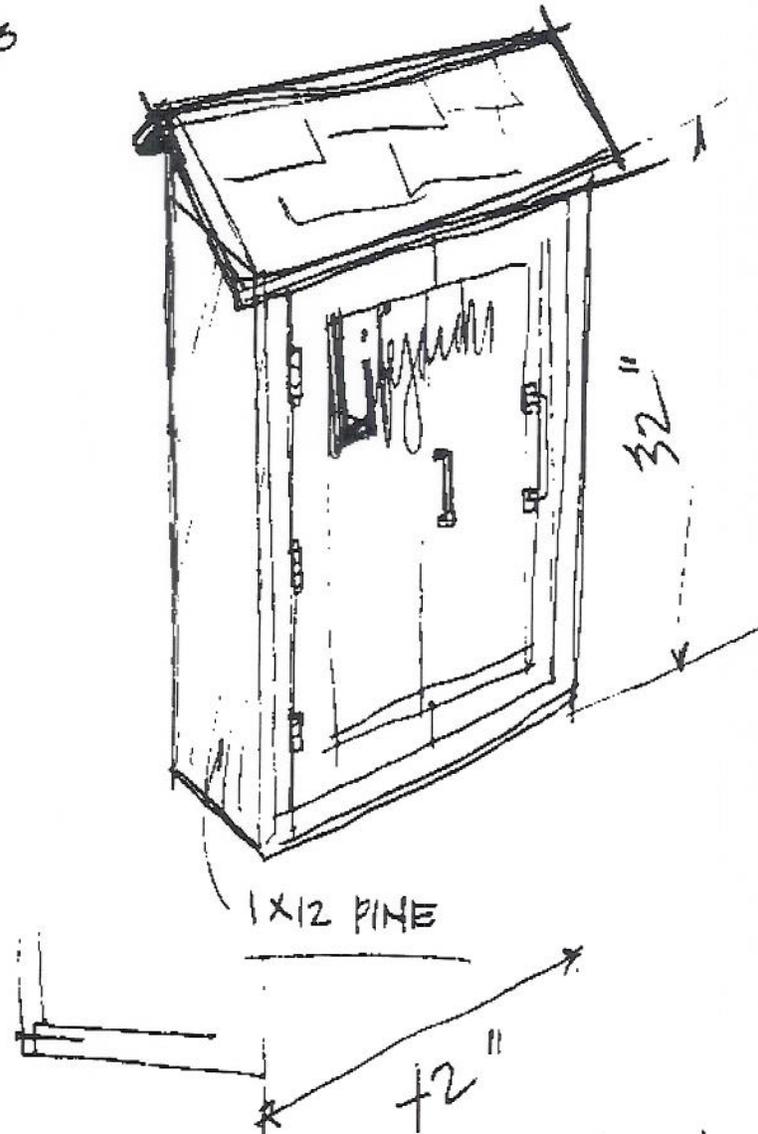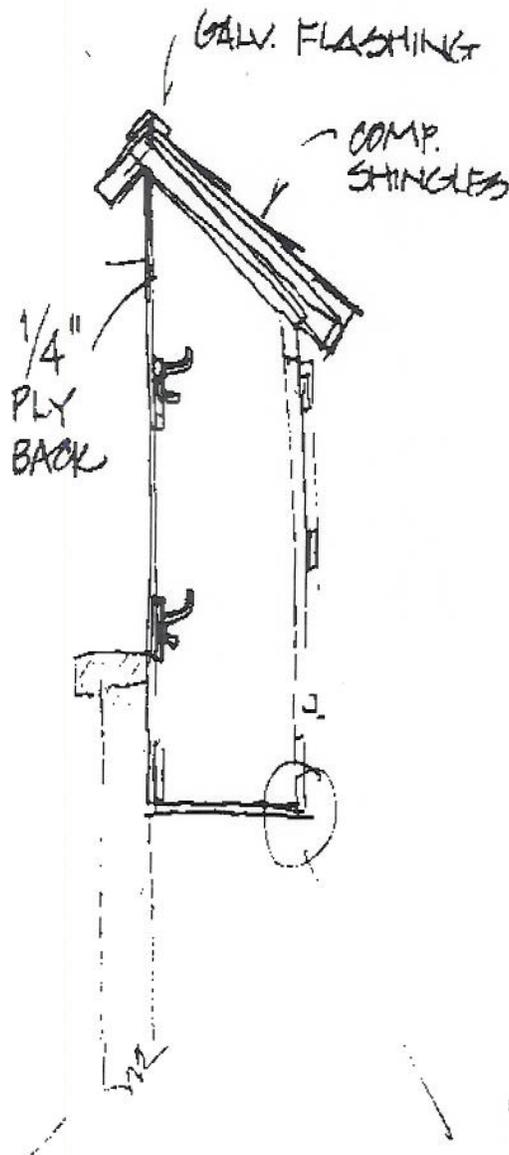

Contact People: S.E.A.K. Women in Fisheries  
Mary Todd Andersen 747-8747  
Ruth McMaster 747-3523


# Wooden Boxes (Style "C")

Materials:  
3/4" Pine  
3/8" Plywood  
Shingles for roof

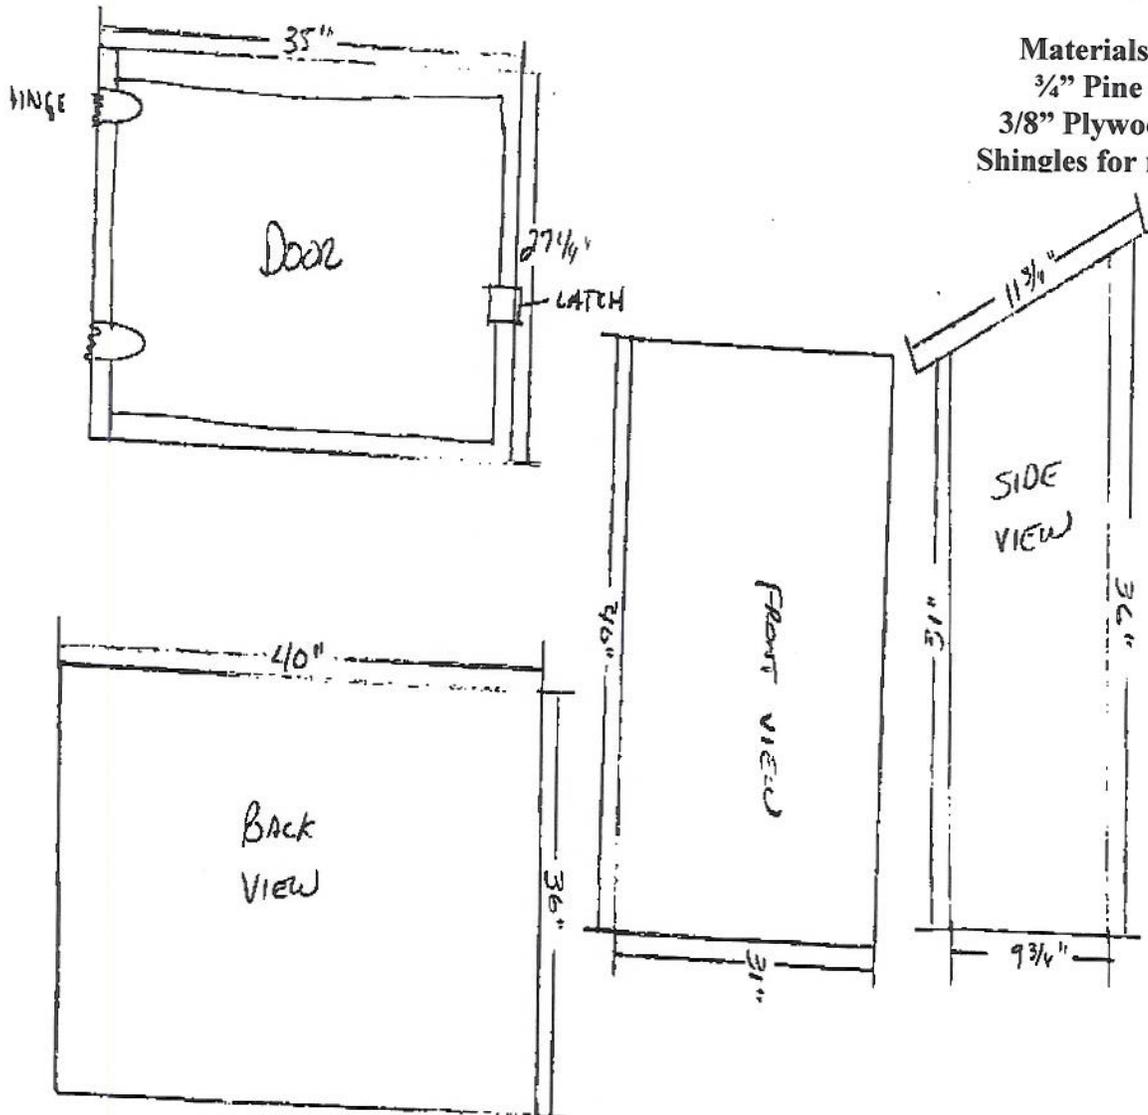

Hooks INSIDE

Kids Don't Float Loaner Board  
Aluminum Boxes (Style "D")  
Designed by Allen Marine Inc. Sitka, AK

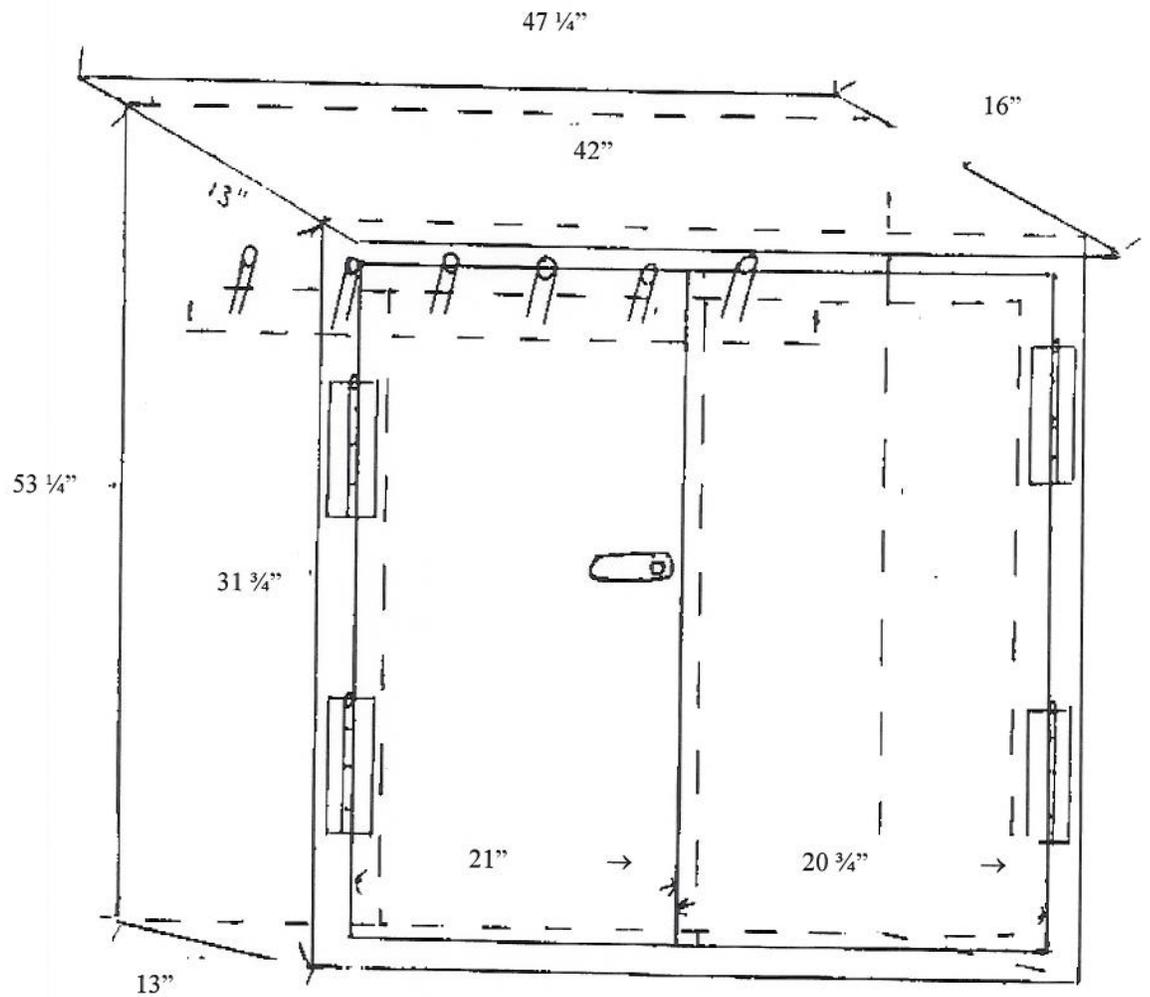

# Kids Don't Float Loaner Board

## Aluminum Boxes (Style "D")


### Materials

- 4 Boxes
- 12-86" Long, 2-3" rectangular aluminum tubing (if lengths are longer, more can go into the ground).
- 14 Bags Redi-Mix Concrete (1 1/2 bag per hole)
- 27 3/8 x 3 1/2" bolts
- 27 nuts
- 27 lock washers

### For Crescent Mounting:

- Add: (6) 3/8 x 1/2" lag screws
- (6) 3/8 washers

For mounting supts into 12x12 Bullrail 1


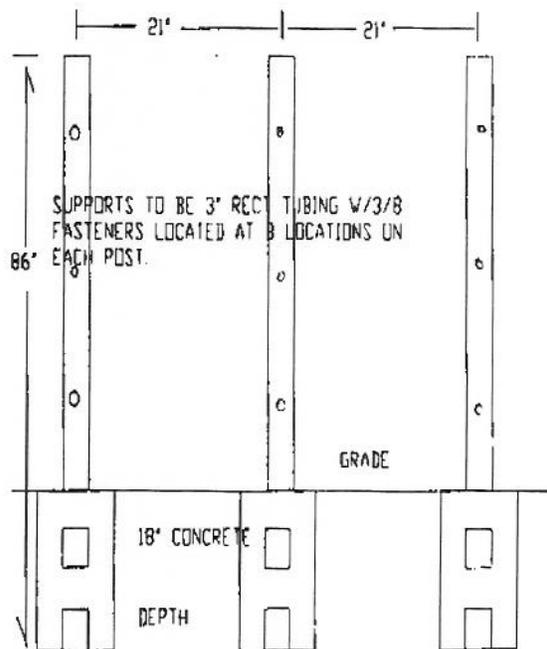


### Contact People:

Mary Todd Anderson  
747-8747

Ruth McMaster  
747-3523


**SAMPLE**

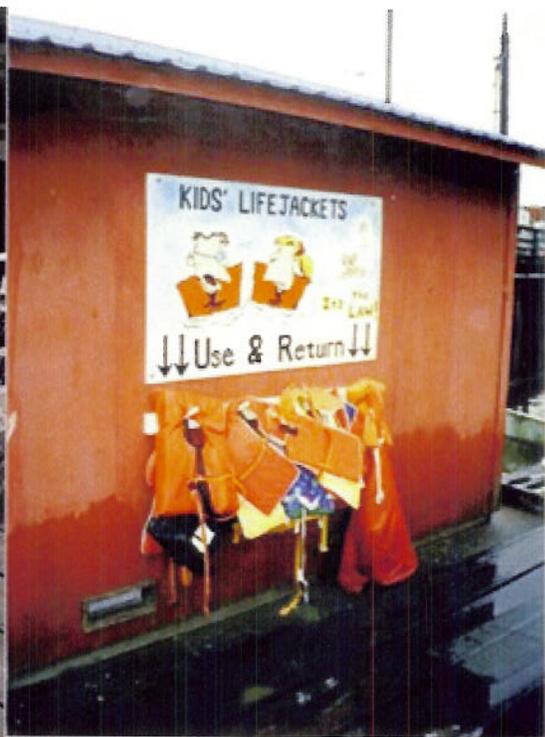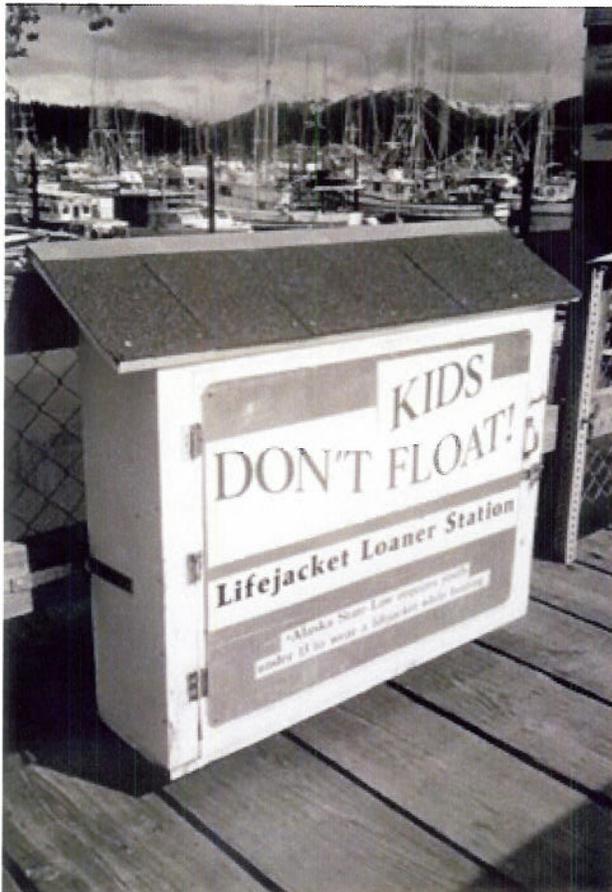

SAMPLE



SAMPLE

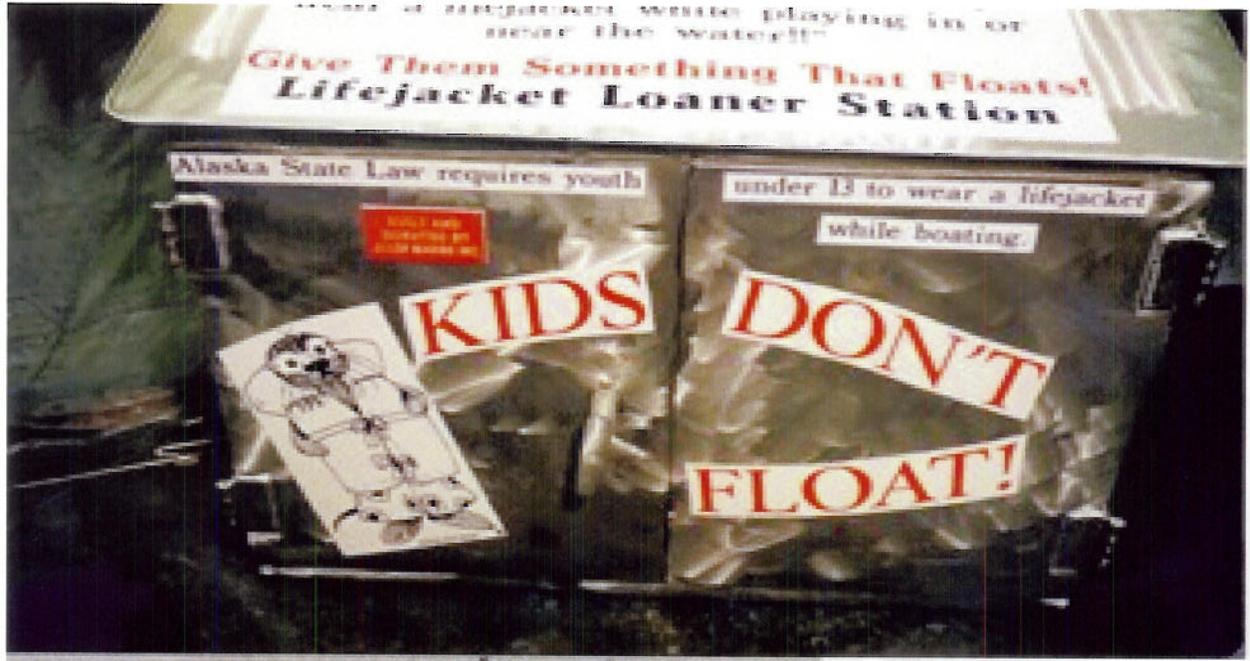

	NAME	ADDRESS	PHONE	DATE	RTND
1	Jane Foston	P.O. BOX 300	747-0000		X
2	...	...	...	...	
3	...	...	...	...	X
4	...	...	...	...	X
5	...	...	...	...	X
6	...	...	...	...	X
7	...	...	...	...	X
8	...	...	...	...	X
9	...	...	...	...	X
10	...	...	...	...	X
11	...	...	...	...	X
12	...	...	...	...	X
13	...	...	...	...	X
14	...	...	...	...	X
15	...	...	...	...	X
16	...	...	...	...	X
17	...	...	...	...	X
18	...	...	...	...	X
19	...	...	...	...	X
20	...	...	...	...	X
21	...	...	...	...	X
22	...	...	...	...	X
23	...	...	...	...	X
24	...	...	...	...	X
25	...	...	...	...	X
26	...	...	...	...	X
27	...	...	...	...	X
28	...	...	...	...	X
29	...	...	...	...	X
30	...	...	...	...	X

SAMPLE

